

 
 
DVD-Player

 
## DVP 01

### Operating instructions



 **BLAUPUNKT**

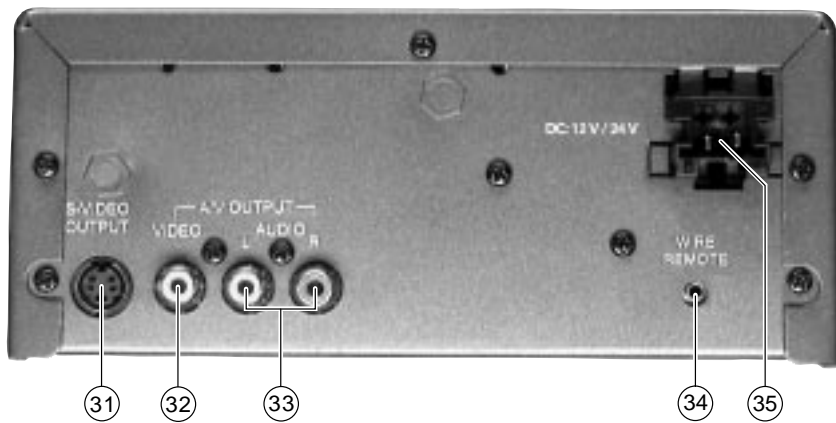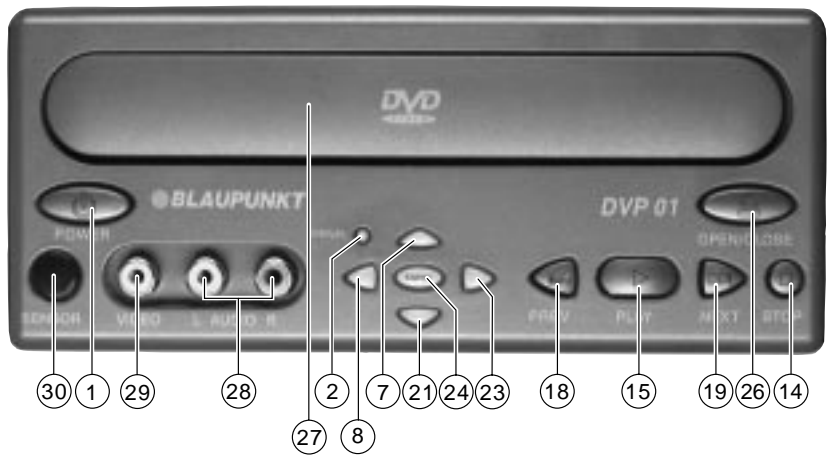

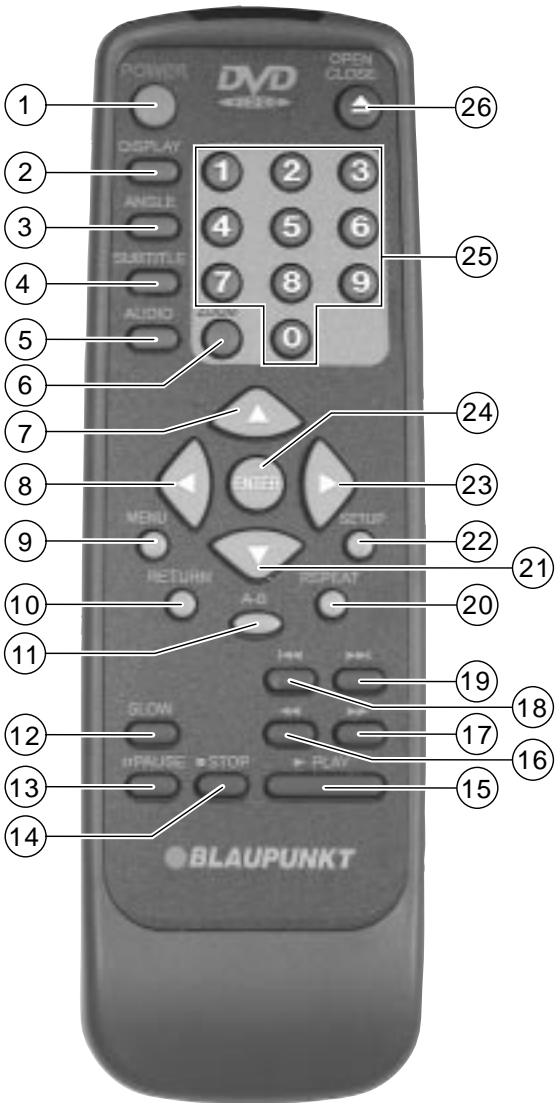

# CONTROLS

---


- ① **POWER** button - to switch the unit on/off
- ② **DISPLAY** button - to show/hide the status bar on the monitor
- ③ **ANGLE** button - to select a camera angle
- ④ **SUBTITLE** button - to select film subtitles
- ⑤ **AUDIO** button - to select the film language
- ⑥ **ZOOM** button - to enlarge a screen section during playback
- ⑦ ▲ button - to move the selection pointer in menus
- ⑧ ◀ button - to move the selection pointer in menus
- ⑨ **MENU** button - to open a DVD's main menu
- ⑩ **RETURN** button - to exit a menu item in a menu
- ⑪ **A-B** button - to mark a custom sequence on a DVD
- ⑫ **SLOW** button - to start/stop slow motion
- ⑬ **PAUSE** button - to pause playback
- ⑭ **STOP** button - to stop playback
- ⑮ **PLAY** button - to start playback
- ⑯ ◀◀ button - to fast rewind
- ⑰ ▶▶ button - to fast forward
- ⑱ ◀◀ button - to skip to the start of the chapter
- ⑲ ▶▶ button - to skip to the start of the next chapter
- ⑳ **REPEAT** button - to repeat a chapter or title of a film
- ㉑ ▼ button - to move the selection pointer in menus
- ㉒ **SETUP** button - to open the setup menu of the DVP 01
- ㉓ ▶ button - to move the selection pointer in menus
- ㉔ **ENTER** button - to select menu items
- ㉕ **0-9** buttons - to enter numbers
- ㉖ **OPEN/CLOSE** button - to open and close the drive drawer
- ㉗ Drive drawer
- ㉘ **AUDIO** inputs - to connect an external audio source
- ㉙ **VIDEO** input - to connect an external video source
- ㉚ **SENSOR** - IR remote control sensor
- ㉛ **S-VIDEO OUTPUT** - S-VHS output
- ㉜ **VIDEO** output - to connect a monitor
- ㉝ **AUDIO** outputs - to connect a Blaupunkt audio system
- ㉞ **WIRE REMOTE** - to connect a cable remote control (option)
- ㉟ **DC 12V/24V** input - to connect the DVP 01 to a 12 V / 24 V voltage source

<b>Information</b> .....	<b>22</b>	<b>Setup menu</b> .....	<b>29</b>
Road safety .....	22	Opening the setup menu .....	29
<b>Installation</b> .....	<b>22</b>	Selecting the language for the on-screen display .....	29
Mounting .....	22	Selecting the playback language ....	29
Electrical connection .....	22	Setting the subtitle language .....	30
Audio / video connection .....	23	Setting the DVD menu language ....	30
<b>Remote control</b> .....	<b>23</b>	Selecting the monitor settings .....	31
Inserting batteries .....	23	Rating level / child lock .....	31
<b>DVD - video technology of the future</b> .....	<b>24</b>	Setting the colour television standard of the TV unit .....	33
<b>Basic functions</b> .....	<b>24</b>	<b>DVD menu</b> .....	<b>34</b>
Switching on/off .....	24	Opening the DVD menu .....	34
Inserting a DVD .....	24	Selecting DVD menu items .....	34
Removing a DVD .....	25	Closing the DVD menu .....	34
Playing a DVD .....	25	<b>Specifications</b> .....	<b>35</b>
On-screen display .....	25		
Fast forwarding and rewinding .....	26		
Slow motion .....	26		
Stopping and resuming playback ...	26		
Still image .....	26		
Skipping chapters .....	26		
Playing a DVD title .....	27		
Repeating chapters, titles or sequences .....	27		
Displaying subtitles / selecting the language .....	27		
Selecting the playback language ....	28		
Enlarging a screen section .....	28		
Changing the camera angle .....	28		


Thank you for deciding to purchase a Blaupunkt product. We hope you enjoy using this new piece of equipment.


Before using the device, please read these instructions carefully. The Blaupunkt editors are constantly working on making the operating instructions clearer and easier to understand. However, if you still have any questions on how to operate the unit please contact your dealer or the telephone hotline for your country. You will find the hotline telephone numbers printed at the back of this booklet.

## Road safety

 Road safety has priority. Only operate the unit if the road and traffic conditions allow you to do so. Familiarize yourself with the unit before setting off on your journey.

You should always be able to hear police, fire and ambulance sirens from afar. For this reason, set the volume of whatever you are listening to to a reasonable level.

 Risk of injury. The DVP 01 is a CLASS 1 laser product. Never look at the laser beam. Never try looking inside the unit's housing. Never open the unit's housing.

 Never expose the DVP 01 to direct sunlight or ambient temperatures over 80°C since this could result in damage to the DVP 01 and the DVD.

## Installation

### Mounting

If you want to install the DVP 01 yourself, please use the supplied installation brackets. The DVP 01 can be installed in any position.


### **Note**

**Use the supplied screws when installing the DVP 01. Other screws could damage parts inside the DVP 01.**

**Please make sure that the connected cables are not squashed when installing the DVP 01.**

**If you install the player with its underside facing upwards, the DVD may fall out when the drive compartment is opened.**

### Electrical connection

If the AMP plug that is required for the voltage supply connection is not already integrated in the Blaupunkt connection cable (special accessory from the "Professional Line"), use the 4-pin AMP plug and contacts that are included with the player. When preparing the cable, please make sure the polarity is correct. Connect the cable to the voltage source and insert the AMP plug into the **DC 12 V / 24 V**  jack at the back of the DVP 01.

## Audio / video connection

To connect the DVP 01 to your coach system, use the cable that is available from Blaupunkt (special accessories). Connect the cable to the connections (33) at the back of the unit. Make sure that the video and audio cables correspond with the unit's jacks.

## **Remote control**

The supplied infrared (IR) remote control gives you access to all of the unit's functions. The buttons located on the front of the unit can be operated in the same way and offer the same functions as those on the IR remote control.

To ensure that the remote control functions properly, point the IR remote control at the IR sensor (30) when you want to operate the controls.

Instead of the IR remote control, you can also connect a Blaupunkt cable remote control (available from the standard product range) to the **WIRE REMOTE** (34) connection at the back of the unit. The cable remote control only offers a limited number of control functions.

You can also control the main functions of the DVP 01 using the Blaupunkt BCA... control panel on the coach system.

## Inserting batteries

The IR remote control requires two AA type batteries to be able to work. They are supplied with the unit.

- ⇨ Open the battery compartment at the back of the remote control.
- ⇨ Insert the batteries in the battery compartment as shown in the diagram.
- ⇨ Close the battery compartment.

## DVD - video technology of the future

DVD is not only a forward-pointing technology in the video area. After all, DVD does stand for Digital "Versatile" Disc.

The DVD has the same format as a CD or CD-ROM but can store up to 17 gigabytes of data. In comparison, a CD-ROM can only store 650 megabytes.

This kind of storage capacity is large enough for high-quality audio and video recordings - and for a few extras.

A DVD video does not just contain the film itself, it also includes extras like the trailer or the "making of". The film can also be watched in various languages and with various subtitles. You can conveniently access all of these functions using the menu provided by the DVD.

## Basic functions

You can also use the DVP 01 to play standard audio CDs. However, these operating instructions will only deal with playing DVDs. The button functions for playing audio CDs are the same as those for DVDs.

The DVP 01 is equipped to play DVDs with the country code 2. If the unit is intended for use with other country codes, you will be informed of this by a sticker on the back of these operating instructions and on the unit.

### Switching on/off

To switch the unit on/off:

- ⇨ Press the **POWER** button (1).

If the unit already contains a DVD when you switch it on, the DVD's menu will appear automatically or playback will begin. This depends on the DVD that is inserted.

### Inserting a DVD

- ⇨ To insert a DVD, press the **OPEN/CLOSE** button (26).

The DVD drawer opens.

- ⇨ Place the DVD with the printed side uppermost in the drawer's recess.
- ⇨ Press the **OPEN/CLOSE** button (26) again.

The DVD drawer is retracted. Either the DVD's menu will now appear on-screen or playback will begin. This depends on the DVD that is inserted.



## Removing a DVD

- ⇒ Press the **OPEN/CLOSE** button (26).

The DVD drawer opens.

- ⇒ Remove the DVD from the drawer.

To close the drawer again:

- ⇒ Press the **OPEN/CLOSE** button (26) again.

## Playing a DVD

Once you insert the DVD in the unit, either the DVD's menu will appear or playback will begin. This depends on the DVD that is inserted. After you have selected (if need be) the playback language, follow the menu instructions ("Start Film").

- ⇒ Press the **PLAY** button (15).

Playback begins.

## On-screen display

At any time you can view the various settings provided by the DVD and the current device mode in an on-screen display.

The information shown in the display depends on the DVD that is inserted.

Some standard types of information are:

- **T 1/3**: The first of three titles on the DVD is currently being played.
- **C 7/23**: The seventh of 23 chapters on the DVD is currently being played.
- **T 01:07:12**: One hour, seven minutes and twelve seconds of the current title's playing time have elapsed.

The right edge of the on-screen display contains symbols to display:

- Whether you made a selection from the DVD menu.
- What mode the device is currently in, e.g. playback, still image or slow motion mode.
- Whether you tried to access a certain function that is not available for the current device mode or the current DVD.

If the on-screen display is switched off, these symbols will be displayed briefly when you operate a corresponding function.

## **Switching on the on-screen display**

- ⇒ Press the **DISPLAY** button (2).

The on-screen display will appear at the top edge of the screen.

## **Note:**

Certain DVDs provide more settings than can be displayed in one go in the on-screen display. You can browse through all of the available settings by repeatedly pressing the **DISPLAY** button (2).

If you access certain functions, the on-screen display will appear automatically. You can switch off the display again manually.

## **Switching off the on-screen display**

- ⇒ Keep pressing the **DISPLAY** button (2) until the on-screen display disappears.

# BASIC FUNCTIONS

---

## Fast forwarding and rewinding

### **Fast forwarding**

To fast forward or super-fast forward the DVD:

- ⇨ Press the **▶▶** button (17) once or twice respectively.

### **Fast rewinding**

To fast rewind or super-fast rewind the DVD:

- ⇨ Press the **◀◀** button (16) once or twice respectively.

### **Stopping fast forwarding / rewinding**

To stop fast forwarding / rewinding:

- ⇨ Press the **PLAY** button (15).

The DVD will then be played at normal speed.

### **Slow motion**

You can slow down DVD playback.

- ⇨ To reduce the playback speed, press the **SLOW** button (12) once or several times.

Every press of the button causes the speed to be slowed down by half.

- ⇨ If you press the **SLOW** button (12) four times, you can slow down the playback speed to a maximum of one sixteenth of the normal playback speed.

To play a DVD at normal speed again:

- ⇨ Press the **PLAY** button (15).

## Stopping and resuming playback

### **Stopping playback**

- ⇨ Press the **STOP** button (14).

Playback is interrupted.

### **Resuming playback**

- ⇨ Press the **PLAY** button (15).

Playback is resumed.

### **Still image**

- ⇨ Press the **PAUSE** button (13).

Playback is interrupted and is frozen as a still image.

### **Note:**

You can move forwards frame-by-frame by repeatedly pressing the **PAUSE** button (13).

To continue playback, press the **PLAY** button (15).

### **Skipping chapters**

DVD titles may be divided into several smaller chapters. To skip to the next or any other subsequent chapter:

- ⇨ Press the **▶▶** button (19) once or several times.

Playback will skip to the start of the next or another subsequent chapter accordingly.

To skip to the start of the current or a previous chapter:

- ⇨ Press the **◀◀** button (18) once or several times.

Playback will skip to the start of the current or another previous chapter accordingly.

## Playing a DVD title

DVDs are divided into various titles, which can be chosen individually.

## Repeating chapters, titles or sequences

### Repeating chapters or titles

- ⇒ Press the **REPEAT** button (20) to repeat the current chapter.
- ⇒ Press the **REPEAT** button (20) a second time to repeat the entire title.

### Repeating custom sequences

- ⇒ Whilst the DVD is playing, press the **A-B** button (11) to mark the start of the sequence.
- ⇒ Press the **A-B** button (11) a second time to mark the end of the sequence.

The sequence that you selected will be played again.

### Stopping repeat mode

- ⇒ Press the **PLAY** button (15) to stop repeating the chapter, title or custom sequence.

Normal playback will then resume.

- ⇒ To hide the menu item, press the **DISPLAY** button (2).

## Resuming playback from the beginning of the first title on the DVD

- ⇒ Press the **STOP** button (14) twice.
- ⇒ Press the **PLAY** button (15).

Playback will resume from the beginning of the title.

## Displaying subtitles / selecting the language

To display subtitles:

- ⇒ Press the **SUBTITLE** button (4).

Subtitles will be displayed. The on-screen display appears. The current language and the number of available languages will be displayed next to the subtitle symbol.

To change the subtitle language:

- ⇒ Press the **SUBTITLE** button (4) once or several times until subtitles appear in the required language.

### **Note:**

You can also use the DVD menu to switch subtitles on/off or select the language in which they are displayed (see DVD menu).

# BASIC FUNCTIONS

---

## Selecting the playback language

To select the playback language:

- ⇒ Press the **AUDIO** button (5) once or several times.

The playback language changes. The on-screen display appears. The current language, the language number and the number of available playback languages will be displayed next to the loudspeaker symbol.

### **Note:**

You can also use the DVD menu to change the playback language (see DVD menu).

## Enlarging a screen section

You can enlarge a section of the screen in two steps up to four times its normal size.

To enlarge a screen section twofold:

- ⇒ Press the **ZOOM** button (6) once.

To enlarge a screen section fourfold:

- ⇒ Press the **ZOOM** button (6) a second time.

The screen section will be displayed in the lower left corner of the full screen.

Scroll bars will be displayed at the lower left of the screen indicating the position of the displayed screen section in relation to the full screen.

To move the screen section horizontally and vertically within the full screen:

- ⇒ Press the ◀ (8) / ▶ (23) or ▲ (7) / ▼ (21) button.

## Changing the camera angle

Some DVDs provide two or more different camera angles for the same scene.

The number of the current camera angle and the number of possible camera angles is displayed next to the camera symbol in the on-screen display.

To change the camera angle:

- ⇒ Press the **ANGLE** button (3).

The scene will be displayed from the next camera angle. The on-screen display will appear.

### **Note:**

If no additional camera angles are available, the Ⓞ symbol will appear briefly.

## Setup menu

You can configure the DVD player in the setup menu.

### Opening the setup menu

If there is a DVD playing in the unit, stop it playing.

⇒ Press the **STOP** button (14).

To open the SETUP menu:

⇒ Press the **SETUP** button (22).

#### **Note:**

If you interrupted playback in order to access the SETUP menu, you can resume playback when you close the SETUP menu by pressing the **PLAY** button (15).

### Selecting the language for the on-screen display

Open the SETUP menu.

⇒ Press the ▲ (7) / ▼ (21) buttons to select the “LANGUAGE” menu item.

⇒ Confirm your choice by pressing the **ENTER** button (24).

The language menu appears. The current language will be displayed next to the “OSD LANGUAGE” menu item.

If you want to set another language:

⇒ Press the ▲ (7) / ▼ (21) buttons to select the “OSD LANGUAGE” menu item.

⇒ Confirm your choice by pressing the **ENTER** button (24).

The languages that are available for the on-screen display will appear.

⇒ Press the ▲ (7) / ▼ (21) buttons to select the required language.

⇒ Confirm your choice by pressing the **ENTER** button (24).

You will return to the languages menu. Your chosen language will now appear next to the “OSD LANGUAGE” menu item.

⇒ Press the **RETURN** button (10) to return to the SETUP menu

⇒ Press the **RETURN** button (10) a second time to close the SETUP menu.

### Selecting the playback language

⇒ Open the SETUP menu.

⇒ Press the ▲ (7) / ▼ (21) buttons to select the “LANGUAGE” menu item.

⇒ Confirm your choice by pressing the **ENTER** button (24).

The language menu appears. The current language will be displayed next to the “AUDIO” menu item.

If you want to set another language:

⇒ Press the ▲ (7) / ▼ (21) buttons to select the “AUDIO” menu item.

⇒ Confirm your choice by pressing the **ENTER** button (24).

The available playback languages will appear.

⇒ Press the ▲ (7) / ▼ (21) buttons to select the required language.

# SETUP MENU

Confirm your choice by pressing the **ENTER** button (24).

You will return to the languages menu. Your chosen language will now appear next to the "AUDIO" menu item.

- ⇒ Press the **RETURN** button (10) to return to the SETUP menu
- ⇒ Press the **RETURN** button (10) a second time to close the SETUP menu.

## Setting the subtitle language

Open the SETUP menu.

- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the "LANGUAGE" menu item.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).

The language menu appears. The current language will be displayed next to the "SUBTITLE" menu item.

If you want to set another language:

- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the "SUBTITLE" menu item.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).

The available subtitle languages will appear.

- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the required language.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).

You will return to the languages menu. Your chosen language will now appear next to the "SUBTITLE" menu item.

- ⇒ Press the **RETURN** button (10) to return to the SETUP menu
- ⇒ Press the **RETURN** button (10) a second time to close the SETUP menu.

## Setting the DVD menu language

Open the SETUP menu.

- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the "LANGUAGE" menu item.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).

The language menu appears. The current language will be displayed next to the "MENU LANGUAGE" menu item.

If you want to set another language:

- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the "MENU LANGUAGE" menu item.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).

The languages that are available for the DVD menu will appear.

- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the required language.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).

You will return to the languages menu. Your chosen language will now appear next to the "MENU LANGUAGE" menu item.

- ⇒ Press the **RETURN** button (10) to return to the SETUP menu.
- ⇒ Press the **RETURN** button (10) a second time to close the SETUP menu.

## Selecting the monitor settings

- ⇒ Open the SETUP menu.

The currently selected monitor setting will be displayed next to the "TV SCREEN" menu item

If you want to set another monitor setting:

- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the "TV SCREEN" menu item.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).

The available monitor settings will appear:

- 4:3 LETTERBOX: The DVD player is connected to a 4:3 monitor. A widescreen picture will cover the entire width of the monitor and black bars will appear at the top and bottom edges of the screen.
- 4:3 PAN-SCAN: The DVD player is connected to a 4:3 monitor. A widescreen picture will cover the entire height of the monitor and the left and right edges of the picture will be cut automatically.
- 16:9 WIDE: The DVD player is connected to a 16:9 monitor. The widescreen picture will be displayed fully on the screen.

- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the required monitor setting.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).

You will return to the SETUP menu. Your chosen settings will now appear next to the "TV SCREEN" menu item.

- ⇒ Press the **RETURN** button (10) to close the SETUP menu.

## Rating level / child lock

You can password protect the unit against unauthorised use. You can also specify a "rating level". **"Rating level" in this case means that certain DVDs include a code that sets the minimum age limit for persons viewing that particular DVD.** If you set a rating level that lies below the rating level for the DVD that is inserted in the drive, you will only be able to play the DVD after you have entered a password.

### **Note:**

**Not all DVDs support the rating level function.**

The following list explains the rating level numbering system:

- Level 1: DVD playback is blocked.
- Level 2-7: DVDs suitable for children can be played. All others are blocked.
- Level 8: All DVDs can be played.

# SETUP MENU

---

## Note:

Some DVDs will allow you to unlock locked DVDs directly at the start with YES (ENTER) and the password. In the case of other DVDs, you will first have to change the rating level in the SETUP menu before playing the DVD. This depends on the DVD that is inserted.

## Setting the rating level

To set the rating level:

- ⇨ Open the SETUP menu.
- ⇨ Press the ▲ (7) / ▼ (21) buttons to select the "RATING LEVEL" menu item.
- ⇨ Confirm your choice by pressing the ENTER button (24).

You will be asked to enter the password.

If you have not set a password yet:

- ⇨ Enter **7890** using the numerical keypad **0-9** (25),

## Note:

The **7890** code is always valid and can be used if ever you forget the password.

- ⇨ Confirm your choice by pressing the ENTER button (24).
- ⇨ Press the ▲ (7) / ▼ (21) buttons to select the required rating level 1 ... 8.
- ⇨ Confirm your choice by pressing the SETUP button (22).

## Changing the password

To change the password:

- ⇨ Open the SETUP menu.
- ⇨ Press the ▲ (7) / ▼ (21) buttons to select the "RATING LEVEL" menu item.
- ⇨ Confirm your choice by pressing the ENTER button (24).

You will be asked to enter the password.

If you have not set a password yet:

- ⇨ Enter **7890** using the numerical keypad **0-9** (25),

## Note:

The **7890** code is always valid and can be used if ever you forget the password.

- ⇨ Confirm your choice by pressing the ENTER button (24).
- ⇨ Press the ▲ (7) / ▼ (21) buttons to select the "CHANGE PWD" menu item.
- ⇨ Confirm your choice by pressing the ENTER button (24).

You will be asked to enter the new password.

- ⇨ Enter the new password using the numerical keypad **0-9** (25),
- ⇨ Confirm your choice by pressing the ENTER button (24).



## Setting the colour television standard of the TV unit

To ensure an optimum picture quality, set the colour television standard that is used by the monitor connected to the DVD player.

- ⇒ Open the **SETUP** menu.
- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the “CUSTOM SETUP” menu item.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).

“TV SYSTEM” appears on-screen. The currently set colour television standard “PAL” or “NTSC” will be displayed next to “TV SYSTEM”.

PAL is the standard that is valid in Europe, and NTSC is the standard that is valid in America and Asia.

### **Note:**

If you set a standard that is not supported by your monitor, it may not be able to display a picture.

- ⇒ If you want to set another standard press **ENTER** (24).

The available television standards will appear.

- ⇒ Press the ▲ (7) / ▼ (21) buttons to select the colour television standard used by the monitor.

Confirm your choice by pressing the **ENTER** button (24).

“TV SYSTEM” appears on-screen again alongside the selected standard.

- ⇒ Press the **RETURN** button (10) to return to the **SETUP** menu
- ⇒ Press the **RETURN** button (10) a second time to close the **SETUP** menu.

# DVD MENU

---

## DVD menu

The DVD menu is provided by the DVD that is inserted in the player. When you insert and play a DVD, the DVD menu will automatically appear on-screen.

### Note:

#### The type of options offered in the DVD menu depends on the particular DVD.

As an example, a DVD VIDEO may offer the following options in its DVD menu:

- You can choose between various languages for playback and subtitles.
- Besides the actual film, you can also watch the trailer that ran in cinemas or on the TV to promote the film, and you can watch the film's "making of".
- A film is divided into several consecutive chapters. You can select a chapter and start playback from that point without having to fast forward to that particular point in the film as you would have to do if you were watching a video cassette.

## Opening the DVD menu

⇒ Press the **MENU** button (9).

The DVD menu appears on-screen.

### Note:

You do not have to interrupt playback to be able to open the DVD menu.

## Selecting DVD menu items

- ⇒ Press the ◀▲▼▶ buttons to select the required menu item in the DVD menu.
- ⇒ Confirm your choice by pressing the **ENTER** button (24).
- ⇒ After confirming your choice, the submenu will open. You can then use the ◀ (8) / ▶ (23) or ▲ (7) / ▼ (21) and **ENTER** (24) buttons to make your selection.

## Closing the DVD menu

If you choose a menu item in the DVD menu (e.g. the option to play the film), the DVD menu will close automatically and playback will begin.

If you did not choose anything in the DVD menu:

⇒ Press the **RETURN** button (10).

You will return to the mode that the unit was in when you opened the DVD menu. If, for instance, you opened the DVD menu whilst watching a film, the film will resume playing from that particular point.

**Specifications**

Operating voltage:	12 V/ 24 V
Power consumption:	≤20 Watt
Current consumption:	
In operation:	800 mA
During standby:	50 mA
Operating temperature:	-15°C to +60°C
Air humidity:	10% to 90%
Laser:	650 nm
Colour standards:	PAL and NTSC
Video resolution:	
720 pixels horiz. x 576 pixels vertic.	
720 pixels horiz. x 480 pixels vertic.	
Frequency ranges	
Video:	5 MHz / - 2 dB
Audio:	20 Hz - 20 kHz
Video output level:	1 V <sub>ss</sub> , 75 Ω
Audio output level:	2 V <sub>eff</sub> , 100 Ω
Weight:	2.3 kg
Dimensions:	170 x 73 x 245 mm

Subject to changes