

**Denver CD70**  
**Hamburg CD70**  
**Orlando CD70**  
**Phoenix CD70**

**Operating instructions**



---

Bitte aufklappen  
Open here  
Ouvrir s.v.p.  
Aprite la pagina  
Hier openslaan a.u.b.  
Öppna  
Por favor, abrir  
Favor abrir



## OPERATING ELEMENTS

---

- ①  button for opening the control unit
- ② Button for switching the device on and off and for muting the device
- ③ Volume control
- ④ Softkeys. The function of the Softkeys depends on the contents of the display at the time
- ⑤ **OK** button for confirming menu entries and for leaving the menu
- ⑥ **DEQ** button for calling up the equalizer menu
- ⑦ Multi-function rocker
- ⑧ **MENU** button, which calls up the basic settings menu
- ⑨ **AUD** button for adjusting bass, treble, balance, fader and loudness
- ⑩ **DIS** button, to change the contents of the display
- ⑪ Display
- ⑫ **CD** button, to start playing the CD
- ⑬ **CDC** button, to start play from the CD changer (only if connected) **or** play from an external audio source (only if connected)
- ⑭ **TUNE** button, to begin radio operation  
Calling up the radio function menu (only possible when the radio is switched on)

<b>Note</b> .....	<b>34</b>	Removing the CD .....	48
Road safety .....	34	Selecting a track .....	48
Fitting .....	34	Fast searching (audible) .....	48
Accessories .....	34	Random track replay (MIX) .....	48
Guarantee .....	34	Scanning tracks (SCAN) .....	48
International telephone information .....	34	Repeating tracks (REPEAT) .....	48
<b>KeyCard Theft Protection</b> .....	<b>35</b>	Changing the display contents .....	48
Inserting the KeyCard .....	35	Traffic announcements with CD operation .....	49
Removing the KeyCard .....	35	Programming favourite CD tracks .....	49
“Training” a second KeyCard / Replacing the KeyCard .....	35	Naming CDs .....	50
KeyCard lost or damaged .....	36	<b>CD changer operation (optional)</b> <b>51</b>	
Training a new KeyCard / entering the master code .....	36	Starting CD changer operation .....	51
Visual theft protection (LED) .....	36	Selecting a CD .....	51
Display Radio Passport Data .....	37	Selecting a track .....	51
Care of the KeyCard .....	37	Fast searching (audible) .....	51
<b>Switching On and Off</b> .....	<b>37</b>	Changing the display contents .....	51
<b>Adjusting the Volume</b> .....	<b>38</b>	Repeating play of individual tracks or whole CDs (REPEAT) .....	51
<b>Tone and Volume</b> .....	<b>39</b>	Playing tracks in random sequence (MIX) .....	51
<b>Adjusting the Display</b> .....	<b>40</b>	Sampling all tracks on all CDs (SCAN) ..	52
<b>Radio Operation</b> .....	<b>41</b>	Naming CDs .....	52
Switching on radio operation .....	41	Programming favourite CD tracks .....	53
RDS convenience function (AF, REG) ...	41	<b>CLOCK - Time</b> .....	<b>54</b>
Select waveband/memory level .....	42	Setting the time .....	54
Setting the station .....	42	Selecting 12/24-hour clock mode .....	55
Adjusting the sensitivity of the station search .....	42	Having the time displayed constantly when the device is switched off .....	55
Saving a station .....	43	<b>Equalizer</b> .....	<b>55</b>
Saving a station automatically (Travelstore) .....	43	Adjustment instructions .....	55
Going to a preset station .....	43	Switching the equalizer on and off .....	55
Scanning through stations .....	43	Adjusting the equalizer .....	56
Adjusting the sample duration (Scantime) .....	44	Adjusting the sharpness of the filter .....	56
Program type (PTY) .....	44	Selecting the tone preset .....	56
Optimising radio reception .....	45	Adjusting the level indicator .....	56
Switching between stereo and mono .....	46	Equalizer adjustment guide .....	57
Changing the displayed information .....	46	<b>External audio sources</b> .....	<b>58</b>
<b>Traffic Information</b> .....	<b>46</b>	<b>TMC for dynamic navigation systems</b> .....	<b>58</b>
<b>CD operation</b> .....	<b>47</b>	<b>Pre-amplifier / subout</b> .....	<b>59</b>
Starting CD operation and inserting the CD .....	47	<b>Technical data</b> .....	<b>59</b>
		<b>Installation instructions</b> .....	<b>226</b>

# NOTES

---

Thank you for choosing a Blaupunkt product. We hope your new device brings you a lot of pleasure.

## Note

Before you use your car radio for the first time, please read this guide carefully and make yourself familiar with the device. Keep this guide in the car for later reference.

## Road safety

 Road safety has the first priority. Only make adjustments to your car radio when the traffic conditions allow. Familiarise yourself with the device before you start driving.

You must be able to hear audible alarms from police vehicles, fire engines or ambulances promptly when inside the vehicle. You must therefore listen at an appropriate volume when travelling.

## Fitting

If you want to fit your car radio yourself, read the fitting and connecting notes at the end of the guide.

## Accessories

Only use accessories approved by Blaupunkt.

## Remote control

You can control the basic functions of your car radio safely and conveniently with any of the optional remote controls RC 08, RC 10 or RC 10H.

## Amplifier

Any Blaupunkt amplifier can be used.

## CD changer

The following Blaupunkt CD changers can be connected:

CDC A 06, CDC A 08, CDC A 072 or IDC A 09.

If an adapter cable is used (Blaupunkt no. 7 607 889 093) the CDC A 05 or CDC A 071 CD changers can also be connected.

## Guarantee

The extent of the guarantee depends on the statutory conditions applicable in the country where the device was bought.

Regardless of statutory requirements, Blaupunkt offer a twelve month guarantee.

If you have any questions about your guarantee, please refer to your authorised Blaupunkt dealer. In every case the purchase receipt constitutes the guarantee documentation.

## International telephone information

If you have any questions about the operation of the device, or if you need any other information, please call us!

The numbers for the telephone information are on the last page of this guide.

## KeyCard theft protection

A KeyCard is included with your car radio.

The radio can also be operated with a second KeyCard.

If one KeyCard becomes lost or damaged you can obtain a replacement through your Blaupunkt dealer.

If you use two KeyCards, the settings of the first KeyCard are adopted by the first KeyCard. You can, however, store the following functions separately:

station button allocation, bass, treble, balance and fader settings, loudness, traffic announcement volume, beep volume and equalizer adjustment.

In addition to this, the last values selected for the waveband, station setting, traffic announcements, RDS, REG, scan time, search sensitivity, initial volume and SHARX are stored.

This means that the basic settings you have selected are made as soon as the KeyCard is inserted.

### Inserting the KeyCard

- ⇨ Press the  button, ①.

The control unit opens.

- ⇨ Insert the KeyCard, as shown in the diagram (arrow 1), with the contact surfaces downwards.



- ⇨ Push the KeyCard with the carriage in the direction of the arrow (2) carefully as far as the stop.

- ⇨ Close the control unit (arrow 3).

### Note:

If the wrong kind of card, such as a cashpoint card, is inserted into the device, “Wrong KC” will appear on the display. Remove the incorrect card, and insert a KeyCard that is known to the device.

### Removing the KeyCard

In order to unlock the control unit

- ⇨ press the  button, ①.

The control unit opens.

- ⇨ Push the card with the “carriage” to the right as far as the stop.
- ⇨ Remove the card from the control unit.
- ⇨ Close the control unit.

### Note:

In order to prevent theft, remove the KeyCard whenever you leave the vehicle, and leave the control unit opened.

 For reasons of safety the control unit must always be closed when the vehicle is moving.

### “Training” a second KeyCard / Replacing the KeyCard

A second KeyCard can be “trained” as a substitute if the device is operating with the first KeyCard.

If you want to “train” a second KeyCard

- ⇨ insert the first KeyCard and switch the device on.
- ⇨ Press the **MENU** button, ⑧.

# THEFT PROTECTION

⇨ Press the **Y** or **X** button, (7), until “LEARN KC” appears in the display.

⇨ Press the **▶** button, (7).  
“CHANGE” appears in the display.

⇨ Remove the first KeyCard.

⇨ Insert the new KeyCard.  
“LEARN OK” appears in the display.

To leave the menu

⇨ Press the **MENU** button, (8).

The radio can now be operated with the new KeyCard.

## Note:

Two KeyCards is the maximum that can be used with one device.

If you already have two KeyCards for the device and then “train” a third KeyCard, the device can no longer be used with the KeyCard that was not involved in the training process.

## KeyCard lost or damaged

If all the KeyCards belonging to a device are damaged or lost, you can “train” a new KeyCard.

You can obtain a new KeyCard from your dealer.

In order to be able to use the new KeyCard you will require the device’s master code. You will find this in the device’s Car Radio Passport. The instructions for this are in the section on “Training a new KeyCard”.

 Keep your Car Radio Passport in a safe place, but never in the car itself.

## Training a new KeyCard / entering the master code

If you no longer have a valid KeyCard for your device, and would like to train a new KeyCard

⇨ insert the new, unknown KeyCard into the device.

⇨ Close the control unit.

⇨ If necessary, switch the device off.

⇨ Hold down the **TUNE** and **ST1** buttons, (14) and (4), at the same time.

⇨ Switch the device on with the main button, (2).

“0000” appears in the display.

Enter the four-figure master code from the Car Radio Passport as follows:

⇨ Enter each of the numbers for the master code using the **Y** and **X** buttons, (7).

Press this button as many times as is necessary to obtain the desired number in the display.

⇨ Change the location of your input with the **◀** and **▶** buttons, (7).

⇨ When the master code is correctly shown, press the **OK** button, (5).

If the device switches to play, the new KeyCard has been accepted.

## Visual theft protection (LED)

When the device is switched off and the KeyCard has been removed, the power button and the CD slot illumination can flash if desired. This requires the “LED” setting in the menu to be set to “ON”.

⇨ Press the **MENU** button, (8).

⇨ Press the **Y** or **X** button, (7), until either “LED ON” or “LED OFF” appears in the display.

⇨ Press the **◀** or **▶** button, (7), in order to switch between the settings ON and OFF.

⇨ Press the **OK** button, (5), or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Display Radio Passport Data

Using the supplied KeyCard you can show the Radio Passport data such as the device name, type number (7 6 ...) and the device number in the display.

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **Y** or **A** button, (7), until "LEARN KC" appears in the display.
- ⇨ Press the **➤** button, (7).

The Radio Passport data is shown on the display as moving text.

To leave the menu

- ⇨ Press the **OK** button, (5), or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Care of the KeyCard

The KeyCard can only function properly if the contacts are free from foreign particles. Avoid touching the contacts with your skin.

If necessary, clean the KeyCard contacts using a lint-free cloth dipped in alcohol.

## Switching on and off

There are a number of methods for switching the device on or off.

### Switching on and off with the button (2)

⇨ Press the main button, (2), to switch on. The device switches on.

⇨ To switch off, hold the main button, (2), pressed for longer than two seconds.

The device switches off.

### Switching on and off with the vehicle ignition

If the device is correctly connected to the vehicle ignition, and has not been switched off with the main button, (2), it is switched on and off along with the ignition.

You can also switch the device on when the ignition is off.

- ⇨ Press the main button, (2).

### Note:

In order to protect the vehicle battery, the device is automatically switched off after an hour if the vehicle ignition is off.

### Switching on and off with the KeyCard

You can also switch the device on and off by inserting and removing the KeyCard, if the device was not previously switched off with the main button, (2). Read the chapter on "KeyCard theft protection" for information about inserting and removing the KeyCard.

## Adjusting the volume

The volume can be adjusted in steps from 0 (off) to 66 (maximum).

- ⇨ To increase the volume, turn the volume control to the right.
- ⇨ To reduce the volume, turn the volume control to the left.

## Adjusting the switch-on volume

The volume level of the device when it is switched on can be adjusted.

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **V** button, (7), as often as is necessary for "ON VOL" to appear in the display.
- ⇨ Adjust the switch-on volume with the **<>** buttons, (7), or with the volume control.

If you set a volume level below "1", "LAST VOL" will appear in the display. This means that whatever volume was in use before the device was switched off will be activated again when the device is switched on.

### Risk of serious injury!

If the level of switch-on volume is set to maximum, the volume when switching on can be very high.



If the volume was set to maximum before switching off, and the value for the switch-on volume is set to "LAST VOL", the volume when switching on can be very high.

Either case can result in serious injury to hearing!

- ⇨ Press the **OK** button, (5), or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Muting

You can reduce the level of the volume (mute) suddenly.

- ⇨ Press the main button, (2).  
"MUTE" is shown on the display.

## Cancelling the mute

- ⇨ Press the main button, (2).
- or
- ⇨ Turn the volume control, (3).

## Muting during telephone operation

If your car radio is connected to a mobile telephone, the radio is muted when the telephone is taken "off the hook". This requires the mobile telephone to be connected to the car radio as described in the fitting instructions.

If, in the course of a telephone call, a traffic announcement is made, and if traffic announcements have been given priority, the traffic announcement will be played. For more information, read the section on "Traffic Information".

## Adjusting the volume for the confirmation tone (beep)

With certain functions, if you hold a button pressed for longer than two seconds, for instance in order to save a station frequency to a station button, a confirmation tone, or beep, is generated. The volume level of the beep can be adjusted.

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **V** button, (7), as often as is necessary for "BEEP" to appear in the display.
- ⇨ Adjust the volume with the **<>** buttons, (7), or with the volume control. "0" means that the beep is off, while "9" is the maximum beep volume.
- ⇨ Press the **OK** button, (5), or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Tone and volume

### Note:

You can make separate adjustments to the bass, treble and loudness for each audio source.

### Adjusting the bass

- ⇨ Press the **AUD** button, (9).

“BASS” appears in the display.

- ⇨ Press the **<** or **>** buttons, (7), in order to adjust the bass.

When you have finished the adjustment

- ⇨ Press the **AUD** button, (9).

### Adjusting the treble

- ⇨ Press the **AUD** button, (9).

“BASS” appears in the display.

- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for “TREBLE” to appear in the display.
- ⇨ Press the **<** or **>** buttons, (7), in order to adjust the treble.

When you have finished the adjustment

- ⇨ Press the **AUD** button, (9).

### Loudness

Loudness refers to a bass boost at low volume levels matching the ear's sensitivity.

- ⇨ Press the **AUD** button, (9).

“BASS” appears in the display.

- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for “LOUD” to appear in the display.
- ⇨ Press the **<** or **>** buttons, (7), in order to adjust the loudness. “LOUD OFF” means that the loudness function is inactive, while “LOUD 6” indicates the maximum loudness boost.

When you have finished the adjustment

- ⇨ Press the **AUD** button, (9).

### Adjusting the left/right volume balance

- ⇨ In order to adjust the balance, press the **AUD** button, (9).

“BASS” appears in the display.

- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for “BAL” to appear in the display.
- ⇨ Press the **<** or **>** buttons, (7), in order to adjust the balance between left and right.

When you have finished the adjustment

- ⇨ Press the **AUD** button, (9).

### Adjusting the front/rear volume ratio (fader)

- ⇨ In order to adjust the fader, press the **AUD** button, (9).

“BASS” appears in the display.

- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for “FADER” to appear in the display.
- ⇨ Press the **<** or **>** buttons, (7), in order to adjust the balance between front and rear.

When you have finished the adjustment

- ⇨ Press the **AUD** button, (9).

### TA-SOUND

You can make separate adjustments to the tone and volume for traffic announcements.

- ⇨ Hold down the softkey, (4), indicating “TA” for longer than two seconds.

“TA-SOUND” appears in the display.

- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for the desired parameter to appear in the display.
- ⇨ Perform the adjustments using the **<** or **>** key, (7).

When you have finished the adjustment

- ⇨ Press the **AUD** button, (9).

## Adjusting the display

You can adjust the display to its location in your vehicle and to your taste.

### Adjusting the viewing angle

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **↓** or **↑** button, (7), as often as is necessary for “ANGLE” to appear in the display.
- ⇨ Adjust the viewing angle with the **<>** key, (7).
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

### Adjusting the display brightness

If your car radio has been connected as described in the fitting instructions, the display brightness will switch with the headlights. The display brightness can be set at separate levels for day and night in steps from 1 to 9.

#### Daytime display brightness

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **↓** or **↑** button, (7), as often as is necessary for “DIM DAY” to appear in the display.
- ⇨ Adjust the brightness with the **<>** key, (7).
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

#### Night-time display brightness

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **↓** or **↑** button, (7), as often as is necessary for “DIM NIGHT” to appear in the display.
- ⇨ Adjust the brightness with the **<>** key, (7).
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Radio Operation

This device is equipped with an RDS radio receiver. Many of the FM stations that can be received transmit a signal in addition to the program itself that contains information such as the name of the station and the type of program (PTY).

As soon as it can be received, the name of the station is shown in the display. If desired, the program type can be displayed.

You may read more about this in the section on "Program Type (PTY)".

### Switching on radio operation

If the radio is in one of the other operating modes

⇨ Press the **TUNE** button, (14).

### RDS convenience function (AF, REG)

The RDS convenience functions AF (alternative frequency) and REG (regional) extend the capabilities of your radio (only in FM radio operation).

- AF: If the RDS convenience function has been activated, the device searches automatically in the background for the best frequency on which the set station can be received.
- REG: Some stations divide their programs at certain times into regional programs with different content. The REG function prevents the car radio from switching to alternative frequencies that have a different regional program content.

#### Note:

REG must be separately activated or deactivated in the radio function menu.

### Switching the RDS convenience function on and off

In order to use the RDS convenience functions AF and REG

⇨ press the **TUNE** button, (14), when the radio is operating.

The radio function menu is shown on the display.

⇨ Press the softkey, (4), indicating "RDS".

The RDS convenience functions are active if "RDS" is displayed with light and shade reversed. "REG ON" or "REG OFF" is displayed briefly when the RDS convenience functions are switched on or off.

To return to the basic radio menu

⇨ press the **TUNE** button, (14), or wait for eight seconds. The settings are then saved.

### Switching REG on and off

In order to use the RDS convenience function REG

⇨ press the **TUNE** button, (14), when the radio is operating.

The radio function menu is shown on the display.

⇨ Press the softkey, (4), indicating "REG".

"REG ON" or "REG OFF" is displayed briefly when the REG function is switched on or off.

To return to the basic radio menu

⇨ press the **TUNE** button, (14), or wait for eight seconds. The settings are then saved.

# RADIO OPERATION

## Select waveband/memory level

This radio receives stations in the VHF (FM) waveband as well as MW and LW (AM) stations. Three memory levels are available for the FM waveband, and one memory level is available for each of the MW and LW bands. Six stations can be stored on each memory level.

### Selecting the FM memory level

In order to switch between the FM memory levels

- ⇨ press the softkey, (4), indicating "NEXT" as often as necessary for the desired memory level to be shown in the display.

The memory levels are called up in the sequence FM I, FM II and FMT.

### Selecting the waveband

In order to select one of the FM, MW or LW bands

- ⇨ press the **TUNE** button, (14), when the radio is operating.

The radio function menu is shown on the display.

- ⇨ Press the softkey, (4), indicating "BND" as often as necessary for the desired waveband to be shown in the display.

To return to the basic radio menu

- ⇨ Press the **TUNE** button, (14), or wait for eight seconds. The settings are then saved.

## Setting the station

There are a number of ways to set the station.

### Automatic station search

- ⇨ Press the **Y** or **A** button, (7).

The next station that can be received is tuned in.

## Manual station tuning

You can also tune to the station manually.

- ⇨ Press the **<** or **>** button, (7).

### Note:

Manual station tuning is only possible if the RDS convenience function is deactivated.

### Browsing a chain of stations (FM only)

If a station is providing several programs it is possible to browse through this "chain" of stations.

- ⇨ Press the **<** or **>** button, (7), in order to change to the next link in the station chain.

### Note:

In order to use this function, the RDS convenience function must be active.

You can only change in this way to a station that you have already received once. To do this, use the Scan or Travelstore functions.

## Adjusting the sensitivity of the station search

You can choose whether to search only for stations with strong signals, or whether weak stations should be included.

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **Y** or **A** button, (7), as often as is necessary for "FM-SENS" to appear in the display.

The current value of the sensitivity is shown on the display. "SENS 6" indicates the maximum sensitivity for the reception of distant transmitters, and "SENS 1" indicates the lowest sensitivity.

- ⇨ Adjust the desired sensitivity with the **<>** key, (7).
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Saving a station

### Saving a station manually

- ⇨ Choose the desired memory level from FM I, FM II, FMT or one of the other wavebands, MW or LW.
- ⇨ Tune in the desired station as described under "Setting the station".
- ⇨ Hold down the softkey, (4), indicating the station "ST1" - "ST6" in which the station is to be stored for longer than two seconds.

### Saving a station automatically (Travelstore)

You can also save the six strongest stations in the area automatically (FM only). This is done in the FMT memory level.

#### Note:

Any stations previously saved on this level will be deleted.

In order to use the Travelstore function

- ⇨ press the **TUNE** button, (14), when the radio is operating.

The radio function menu is shown on the display.

- ⇨ Press the softkey, (4), indicating "TS".

Storing starts. "T-STORE" appears in the display. When the procedure is complete, the station in memory location one on the FMT level is played.

### Going to a preset station

- ⇨ Select the memory level or waveband.
- ⇨ Press the softkey, (4), indicating from "ST1" to "ST6" for the desired station.

## Scanning through stations

### Scanning through available stations (radio SCAN)

You can listen to short samples from all the stations that can currently be received. The length of the samples can be set, in the menu, at between 5 and 30 seconds.

#### Starting radio SCAN

To start the radio scan

- ⇨ press the **TUNE** button, (14), when the radio is operating.

The radio function menu is shown on the display.

- ⇨ Press the softkey, (4), indicating "SCA".

The scanning process starts. "SCAN" is shown on the display for a short time, after which the current station name or the frequency is displayed, flashing.

#### Scanning through the preset stations

You can listen to short samples from all the stations saved on the various memory levels that can currently be received. The length of the samples can be set, in the menu, to between 5 and 30 seconds.

#### Starting preset SCAN

To start the preset scan

- ⇨ press the **TUNE** button, (14), when the radio is operating.

The radio function menu is shown on the display.

- ⇨ Hold down the softkey, (4), indicating "SCA" for longer than one second.

The scanning process starts. "SCAN" is shown on the display for a short time. The memory levels are scanned one after another, and the memory location from "ST1" to "ST6" currently being sampled is displayed with light and shade reversed.

# RADIO OPERATION

## Stopping the SCAN, continue listening to a station

- ⇨ Press the softkey, (4), indicating "SCA" again.

The scanning process is stopped, and the last station sampled remains active.

## Adjusting the sample duration (Scantime)

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for "SCANTIME" to appear in the display.
- ⇨ Adjust the desired sampling time with the **<< >>** key, (7).
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

### Note:

The sampling duration that is selected is also applied to the scanning in CD, tape cassette, MiniDisc and CD changer operation (depending on how the radio is equipped).

## Program type (PTY)

As well as the station name itself, some FM stations also supply information about the type of program being transmitted. This information can be received and displayed by your radio.

Examples of these program types could be:

CULTURE	TRAVEL	JAZZ
SPORT	NEWS	POP
ROCK	CLASSICS	

Using the PTY function it is possible to specifically select stations transmitting a particular program type.

If you have started a PTY search, but no matching station is found, the search will be continued in the background.

As soon as a station of the selected type is found, the device changes over from the present station, or out of CD, cassette tape, MiniDisc or CD changer operation (depending on how the radio is equipped) to the station with the selected program type.

## Switching PTY on and off

In order to use the PTY function

- ⇨ press the **TUNE** button, (14), when the radio is operating.

The radio function menu is shown on the display.

- ⇨ Press the softkey, (4), indicating "PTY".

When PTY is switched on, the display briefly shows the last program type that was selected. PTY appears in the display.

To return to the basic radio menu

- ⇨ press the **TUNE** button, (14), or wait for eight seconds. The settings are then saved.

## Selecting the program type and starting the search

- ⇨ Press the **<** or **>** button, (7).

The current program type is shown on the display.

If you want to change to a different program type

- ⇨ press the **<** or **>** button, (7), as often as necessary, until the desired program type is displayed.

### Or

- ⇨ In order to select a saved program type, press one of the softkeys, (4), indicating "ST1" to "ST6".

The selected program type is briefly displayed.

In order to start the search

- ⇨ press the **▼** or **▲** button, (7).

The next receivable station with the selected program type is tuned in.

## Note:

If no station is found with the chosen program type, a beep is sounded, and the display briefly shows "NO PTY". The tuner returns to the most recently received station.

## Storing the program type on the station button

- ⇨ Select a program type with the **<** or **>** button, (7).
- ⇨ In order to save a program type, hold down one of the softkeys, (4), indicating "ST1" to "ST6", for more than one second.

The program type is saved at the chosen location.

## Setting the PTY language

You can select the language in which program types are displayed.

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **V** or **A** button, (7), as often as is necessary for "PTY LANG" to appear in the display.
- ⇨ Press the **<** or **>** button, (7), in order to switch between the languages "DEUTSCH", "ENGLISH" or "FRANCAIS".
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Optimising radio reception

### Treble cut in the presence of interference (HICUT)

The HICUT function improves the sound when radio reception is poor.

When interference is being received, the treble is automatically cut, which therefore also reduces the level of interference.

## Adjusting HICUT

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **V** or **A** button, (7), as often as is necessary for "HICUT" to appear in the display.
- ⇨ Press the **<** or **>** buttons, (7), in order to adjust the HICUT.

"NO HICUT" means that the function is inactive, while "HICUT 3" indicates the strongest automatic reduction of the treble and the interference.

- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

### Bandwidth selection in the presence of interference (SHARX)

The SHARX function provides you with the facility of eliminating interference from neighbouring stations as far as possible. Switch on the SHARX function when stations are crowded.

### Switching SHARX on and off

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **V** or **A** button, (7), as often as is necessary for "SHARX" to appear in the display.
- ⇨ Press the **<** or **>** buttons, (7), in order to switch SHARX on or off.

"NO SHARX" means that the function is not active, while "SHARX ON" means that the bandwidth selection is operating automatically.

- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Switching between stereo and mono

When radio reception is poor you can switch the mode to mono. The changeover from stereo to mono is executed smoothly. The radio plays in stereo after being switched on. The selection of stereo or mono is made via the menu.

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for "STEREO" or "MONO" to appear in the display.
- ⇨ Press the **◀** or **▶** button, (7), to choose between stereo and mono.
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Changing the displayed information

You can select the information shown on the display.

The upper display line (the headline) can display the station name, frequency or the program type. The lower display line (DOT field) can display the time or the memory level.

### Changing the headline

- ⇨ Hold down the **DIS** button, (10), until the desired information, i.e. the station name, frequency or program type, appears.

### Changing the DOT field

- ⇨ Hold down the **DIS** button, (10), for longer than one second.

The display switches between time and memory level.

## Traffic Information

Your car radio is equipped with an RDS-EON receiver.

EON (**E**nhanced **O**ther **N**etwork) stands for the broadcasting of station information within a broadcasting network.

If a traffic announcement (TA) is made, your radio will tune automatically from a non-traffic-information station to a traffic-information station with the broadcasting network.

The radio then reverts to the programme previously heard once the traffic announcement is over.

## Switching traffic information priority on and off

- ⇨ Press the softkey, (4), indicating "TA".

Traffic announcement priority is activated if "TA" appears with light and shade reversed.

### Note:

You will hear a warning tone

- if you leave the reception area of a traffic radio station to which you are listening,
- if, when you are listening to a CD, tape cassette or MiniDisc (according to how the radio is equipped) the reception area of the selected traffic radio station, and the automatic search which then follows fails to find a new traffic radio station,
- if you change from a traffic radio station to a station with no traffic information.

Either switch off the traffic information priority or change over to a station with traffic information.

**Adjusting the volume for traffic announcements**

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **V** or **A** button, (7), until "TA VOLUME" appears in the display.
- ⇨ Adjust the volume with the **<** **>** buttons, (7), or with the volume control.
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

**CD operation**

You can play 12 cm-diameter commercial CDs on this device.

So-called CD-Rs ("home-made" CDs) can also usually be played. However, because of the varying CD quality, Blaupunkt cannot guarantee correct function.

Rewritable CDs (CD-RWs) cannot be played!

 There is a risk of damaging the CD drive!

Neither CD singles with a diameter of 8 cm nor non-circular "shape" CDs may be used.

No responsibility can be accepted for damage to the CD drive through the use of unsuitable CDs.

**Starting CD operation and inserting the CD**

- If there is no CD in the drive
- ⇨ press the **CD** button, (1).

The control unit opens.

- ⇨ Insert the CD with the printed side upwards gently into the drive until you can feel some resistance.

The CD is automatically drawn into the drive. As the CD is drawn in it must neither be held back nor supported.

- ⇨ Close the control unit with gentle pressure until you feel it latch.

The CD menu is displayed, and the CD starts playing.

- If there is already a CD in the drive
- ⇨ press the **CD** button, (12).

The CD menu is displayed, and play begins from the point where it was last interrupted.

# CD OPERATION

## Removing the CD

- ⇨ Press the **⏏** button, (1).

The control unit opens to the front.

- ⇨ Press the **⏏** button on the opened control unit.

The CD is ejected.

- ⇨ Carefully remove the CD.

### Note:

If you do not remove the CD within 30 seconds it will be drawn back into the drive.

## Selecting a track

- ⇨ Press one of the buttons in the arrow button group, (7), as often as needed for the number of the desired track to appear in the display.

If the **⏮** or **⏪** button, (7), is pressed once the current track will be started again.

## Fast searching (audible)

In order to search rapidly backwards or forwards

- ⇨ hold down one of the **⏮**, **⏪** or **⏩** buttons, (7), until the fast search backwards of forwards starts.

## Random Track Replay (MIX)

- ⇨ Press the softkey, (4), indicating "MIX".

"MIX CD" appears briefly on the display. The next track to be played will be selected at random.

### Ending MIX

- ⇨ Press the softkey, (4), indicating "MIX" again.

"MIX OFF" appears briefly on the display.

## Scanning tracks (SCAN)

You can hear a brief sample from all the tracks on the CD.

- ⇨ Press the softkey, (4), indicating "SCA".

"SCAN" appears in the display. The tracks on the CD are played in ascending order.

### Note:

The duration of the samples can be adjusted. For information on setting the sampling duration, read the paragraphs on "Adjusting the Sample Duration" in the "Radio Operation" section.

### Stopping the SCAN to continue listening to a track

- ⇨ Press the softkey, (4), indicating "SCA" again.

The track that is currently being sampled will continue to be played.

## Repeating tracks (REPEAT)

- ⇨ Press the softkey, (4), indicating "RPT".

The title will be repeated until RPT is deactivated.

### Stopping REPEAT

- ⇨ Press the softkey, (4), indicating "RPT" again.

Play continues as normal.

## Changing the display contents

You can choose between different display modes during CD operation:

- Display of track number and time.
- Display of track number and play time.
- Display of CD name and track number.
- ⇨ In order to change between the display modes, press the **DIS** button, (10), as often as you need for the desired information to be shown on the display.

**Note:**

It is only possible for a CD name to be displayed if the inserted CD has been provided with a name. Read the section on "Naming CDs".

**Traffic announcements with CD operation**

- ⇨ If you wish to receive traffic announcements during CD operation, press the softkey, (4), indicating "TA".

Traffic announcement priority is activated if TA appears with light and shade reversed. For more information, read the section on "Traffic Information".

**Programming favourite CD tracks**

You can use the TPM function (Track Program Memory) to program, save and replay your favourite tracks from a particular CD. You can program the tracks in any order, but they will be played in ascending order. If favourite track play is active, only the tracks previously programmed will be played from the CD that is in the drive. Up to 30 CDs with a maximum of 40 tracks on each can be handled.

**Programming favourite tracks**

Proceed as follows to program your favourite tracks on a CD:

- ⇨ Insert the CD for which you want to program your favourite tracks into the CD drive.
- ⇨ Select your first favourite track.
- ⇨ Hold down the softkey, (4), indicating "TPM" for longer than one second.

The track is accepted into the list of favourite tracks for this CD.

- ⇨ Continue in the same way for all the other favourite tracks on the CD.

**Switching favourite track play on and off**

In order to begin playing the programmed favourite tracks on the inserted CD, or to stop playing only the favourite tracks

- ⇨ briefly press the softkey, (4), indicating "TPM".

The current TPM status ("TPM ON" or "TPM OFF") is briefly displayed.

If favourite track play is active, "TPM" appears on the display with light and shade reversed.

**Deleting titles from the list**

In order to remove individual entries from the programmed list of favourite tracks on a CD

- ⇨ switch TPM on.
- ⇨ Select the title that is to be deleted.
- ⇨ Hold down the softkey, (4), indicating "CLR" for about **two** seconds.

"TRCK CLR" appears briefly on the display, and the track has been removed from the programmed list.

**Delete the list of favourite tracks for a CD**

You can delete the whole list of favourite tracks for a CD. The CD whose list of favourite tracks is to be deleted must be inserted.

- ⇨ switch TPM on.
- ⇨ Hold down the softkey, (4), indicating "CLR" for about **five** seconds.

"CD CLR" appears briefly on the display, and programming has been cleared.

**Clearing all the lists of favourite titles from the device**

You can delete all the programmed lists of favourite tracks for all CDs.

A CD for which favourite tracks are programmed must be inserted.

- ⇨ Switch TPM on.
- ⇨ Hold down the softkey, (4), indicating "CLR" for about eight seconds.

"ALL CLR" appears briefly on the display, and all programmed lists have been cleared.

# CD OPERATION

## Naming CDs

In order to recognise your CDs more effectively, the car radio allows you to give individual names to up to 30 CDs. The names may have a maximum of eight characters.

If you attempt to assign more than 30 names, the display will show "FULL".

### Entering and changing CD names

- ⇨ Listen to the CD that you want to name.
- ⇨ Press the **MENU** button, (8).
- ⇨ Use the **▲ / ▼** buttons, (7), to select "CD NAME".
- ⇨ Press the **◀** or **▶** button, (7).

The device enters edit mode. If your chosen CD is not yet named, eight underscores appear in the display.

The current entry location blinks.

- ⇨ Use the **▲ / ▼** buttons, (7), to select your character. If a location is to remain empty, select the underscore.
- ⇨ Use the **◀** or **▶** button, (7), to change the input location.
- ⇨ To save the name, press the **MENU** button, (8).

### Deleting a CD name

- ⇨ Listen to the CD whose name is to be deleted.
- ⇨ Press the **MENU** button, (8).
- ⇨ Use the **▲ / ▼** buttons, (7), to select "UPDATE".
- ⇨ Press the **▶** button, (7).

"CLR DISC" appears in the display.

- ⇨ Hold down the **OK** button, (5). After four seconds a beep is heard, and "DELETING" appears on the display.
- ⇨ Release the **OK** button, (5).

The CD name has been deleted.

- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

### Deleting all CD names

- ⇨ Listen to a CD.
  - ⇨ Press the **MENU** button, (8).
  - ⇨ Use the **▲ / ▼** buttons, (7), to select "UPDATE".
  - ⇨ Press the **◀** button, (7).
- "CLR ALL" appears in the display.
- ⇨ Hold down the **OK** button, (5). After four seconds a beep is heard, and "DELETING" appears on the display.
  - ⇨ Release the **OK** button (5).
- All CD names have been cleared.
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

## CD changer operation (optional)

On page 34 of this guide you can find which CD changers can be used with this device. You can also refer to your Blaupunkt dealer.

### Note:

The operating instructions for your CD changer will provide information about handling CDs, inserting them and operating the CD changer.

## Starting CD changer operation

- ◇ Press the **CDC** button, (13).

The CD changer menu is displayed, and play will continue from the point where it was last interrupted. If the magazine is removed from the CD changer and re-inserted, play will start with the first track on the first CD detected by the CD changer.

## Selecting a CD

- ◇ In order to change up or down to another CD, press the **>** or **<** button, (7), until the number of the CD you want appears on the display.

## Selecting a track

- ◇ In order to change up or down to another track on the current CD, press the **▲** or **▼** button, (7), until the number of the track you want appears on the display.

If the **▼** button, (7), is pressed once the current track is started again.

## Fast searching (audible)

In order to search rapidly backwards or forwards

- ◇ hold down one of the **▼** or **▲** buttons, (7), until the fast search backwards or forwards starts.

## Changing the display contents

You can choose between different display modes during CD changer operation:

- Display of CD number, track number and time.
  - Display of CD number, track number and playing time.
  - Display of CD name and track number.
- ◇ In order to change between the display modes, press the **DIS** button, (10), as often as you need for the desired information to be shown on the display.

### Note:

It is only possible for a CD name to be displayed if the inserted CD has been provided with a name. Read the section on "Naming CDs".

## Repeat play of individual tracks or whole CDs (REPEAT)

- ◇ Press the softkey, (4), indicating "RPT". "RPT TRCK" appears briefly on the display.

- ◇ In order to repeat play of the whole CD, press the softkey, (4), indicating "RPT" again.

"RPT DISC" appears briefly on the display.

## Stopping REPEAT

In order to stop repeating either the current track or the current CD

- ◇ press the softkey, 4, indicating "RPT" as often as necessary for the "RPT OFF" to be shown in the display.

## Playing tracks in random sequence (MIX)

In order to play the tracks on the current CD in a random sequence

- ◇ Press the softkey, (4), indicating "MIX".

"MIX CD" appears briefly on the display.

## CD CHANGER OPERATION

In order to play the tracks on all the inserted CDs in a random sequence

- ⇨ Press the softkey, (4), indicating "MIX" again.

"MIX MAG" appears briefly on the display.

### Note:

The CDC A 08 and the IDC A 09 will make random selections from all the CDs and all the tracks in the changer. All other changers will first play through all the tracks of one CD at random before moving on to the next CD in the changer.

### Ending MIX

- ⇨ Press the softkey, (4), indicating "MIX" as often as necessary for "MIX OFF" to be shown in the display.

### Sampling all tracks on all CDs (SCAN)

In order to hear a short sample of all the tracks on all the inserted CDs in ascending order

- ⇨ press the softkey, (4), indicating "SCA".

"SCAN" appears in the display.

### Ending SCAN

In order to stop sampling the tracks

- ⇨ press the softkey, (4), indicating "SCA" again.

The track that is currently being sampled will continue to be played.

### Note:

The duration of the samples can be adjusted. For information on setting the sampling duration, read the paragraphs on "Adjusting the Sample Duration" in the "Radio Operation" section.

## Naming CDs

In order to recognise your CDs more effectively, the car radio allows you to give individual names to up to 99 CDs. The names may have a maximum of seven characters. If you attempt to assign more than 99 names, the display will show "FULL".

### Entering and changing CD names

- ⇨ Press the **MENU** button, (8).
- ⇨ Use the **↵** / **⏏** buttons, (7), to select "CDC NAME".
- ⇨ Press the **<** or **>** button, (7).

The device is now in selection mode.

- ⇨ Choose the CD that you want to name with the **↵** / **⏏** buttons, (7).
- ⇨ Press the **<** or **>** button, (7).

The device enters edit mode. If your chosen CD is not yet named, seven underscores appear in the display.

The current entry location blinks.

- ⇨ Use the **↵** / **⏏** buttons, (7), to select your characters. If a location is to remain empty, select the underscore.
- ⇨ Use the **<** or **>** button, (7), to change the input location.
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

### Deleting a CD name

- ⇨ Listen to the CD whose name is to be deleted.
- ⇨ Press the **MENU** button, (8).
- ⇨ Use the **↵** / **⏏** buttons, (7), to select "UPDATE".
- ⇨ Press the **>** button, (7).

"CD CLR" appears briefly on the display, after which the CD name is shown.

- ⇨ Hold down the **OK** button, (5).

After four seconds "DELETING" appears on the display.

- ⇨ Release the **OK** button (5).

The CD name has been deleted.

- ⇨ Press the **MENU** button, (8), or **OK**, (5).

## Deleting all CD names

- ⇨ Listen to a CD in CD changer mode.

- ⇨ Press the **MENU** button, (8).

- ⇨ Use the **▲ / ▼** buttons, (7), to select "UPDATE".

- ⇨ Press the **◀** button, (7).

"CLR ALL" appears in the display.

- ⇨ Hold down the **OK** button, (5).

After four seconds "DELETING" appears on the display.

- ⇨ Release the **OK** button, (5).

All CD names have been cleared.

- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Programming favourite CD tracks

You can use the TPM function (**T**rack **P**rogram **M**emory) to program, save and replay your favourite tracks from a particular CD. You can program the tracks in any order, but they will be played in ascending order. If favourite track play is active, only the tracks previously programmed will be played from the current CD. Up to 30 CDs with a maximum of 40 tracks on each can be handled.

### Programming favourite tracks

Proceed as follows to program your favourite tracks on a CD:

- ⇨ Select the CD for which you want to program your favourite tracks in CD changer operation.

- ⇨ Select your first favourite track.

- ⇨ Hold down the softkey, (4), indicating "TPM" for longer than one second.

The track is accepted into the list of favourite tracks for this CD.

- ⇨ Continue in the same way for all the other favourite tracks on the CD.

### Switching favourite track play on and off

In order to begin playing the programmed favourite tracks on the inserted CD, or to stop playing only the favourite tracks

- ⇨ briefly press the softkey, (4), indicating "TPM".

The current TPM status ("TPM ON" or "TPM OFF") is briefly displayed.

If favourite track play is active, "TPM" appears on the display with light and shade reversed.

### Deleting titles from the list

In order to remove individual entries from the programmed list of favourite tracks on a CD

- ⇨ switch TPM on.
- ⇨ Select the title that is to be deleted.
- ⇨ Hold down the softkey, (4), indicating "CLR" for about **two** seconds.

"TRCK CLR" appears briefly on the display, and the track has been removed from the programmed list.

### Deleting the list of favourite tracks for a CD

You can delete the whole list of favourite tracks for a CD. The CD whose list of favourite tracks is to be deleted must be being played.

- ⇨ Switch TPM on.
- ⇨ Hold down the softkey, (4), indicating "CLR" for about **five** seconds.

"CD CLR" appears briefly on the display, and programming has been cleared.

## Clearing all the lists of favourite titles from the device

You can delete all the programmed lists of favourite tracks for all CDs.

A CD for which favourite tracks are programmed must be inserted.

- ⇨ Switch TPM on.
- ⇨ Hold down the softkey, (4), indicating "CLR" for about **eight** seconds.

"ALL CLR" appears briefly on the display, and all programmed lists have been cleared.

## CLOCK - Time

### Setting the time

The clock time can be automatically set by means of the RDS signal. If you cannot receive an RDS station, or if the RDS station to which you are listening does not support this function, it is also possible to set the time manually.

### Having the time set automatically

- ⇨ In order to have the time set automatically, press the **MENU** button, (8).
- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for "CLK MAN" (manual) to appear in the display.

If "CLK AUTO" is displayed, automatic time setting is already active.

- ⇨ Press the **▶** button, (7), as often as is necessary for "CLK AUTO" to appear in the display.
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

If "CLK AUTO" has been selected and a station with the RDS time function (RDS-CT) is received, the clock is automatically adjusted.

### Setting the time manually

- ⇨ In order to adjust the time, press the **MENU** button, (8).
- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for "CLOCKSET" to appear in the display.
- ⇨ Press the **◀** or **▶** button, (7).

The time is shown on the display. The hours blink and can be adjusted.

- ⇨ Adjust the hours with the **▲** / **▼** button, (7).
- ⇨ When the hours have been set, press the **▶** button, (7).

The minutes blink.

- ◇ Adjust the minutes with the **▲ / ▼** button, (7).
- ◇ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

### Selecting 12/24-hour clock mode

- ◇ Press the **MENU** button, (8).
- ◇ Press the **▼** or **▲** button, (7), as often as is necessary for "24 H MODE" or "12 H MODE" to appear in the display.
- ◇ Press the **◀** or **▶** buttons, (7), to switch between the modes.
- ◇ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

### Having the time displayed constantly when the device is switched off

- ◇ If you want the time to be displayed when the device is switched off and the ignition is switched on, press the **MENU** button (8).
- ◇ Press the **▼** or **▲** button, (7), as often as is necessary for "CLK OFF" or "CLK ON" to appear in the display.
- ◇ Press the **◀** or **▶** button, (7), to switch between the display being ON or OFF.
- ◇ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Equalizer

This device has a parametric digital equalizer. In this case, parametric means that in each of the three filters, **one** individual frequency can be emphasised or reduced (with a gain of +8 to -8 dB).

The following filters are available:

- LOW EQ            32 - 200 Hz
- MID EQ            250 - 1,600 Hz
- HIGH EQ          2,000 - 12,500 Hz

These filters can be set without using any measuring instruments. It allows the sound properties in the vehicle to be significantly affected.

### Adjustment instructions

We recommend using a familiar CD to perform this adjustment.

Before making any adjustments to the equalizer zero the tone settings and deactivate the loudness. For more information, read the section on "Tone and volume".

- ◇ Listen to a CD, tape cassette or MiniDisc (according to how the radio is equipped).
- ◇ Compare the sound you hear with how you feel it should be.
- ◇ Now consult the "Equalizer adjustment guide" table for "Tone impression".
- ◇ Adjust the equalizer values as described under "Action".

### Switching the equalizer on and off

- ◇ To switch off the equalizer, press the **DEQ** button, (6).

"LOW EQ" is shown on the display.

- ◇ To switch off the equalizer, hold down the **DEQ** button, (6) until "DEQ OFF" briefly appears.

# EQUALIZER

## Adjusting the equalizer

- ⇨ Press the **DEQ** button, (6).
- ⇨ Select the “LOW EQ”, “MID EQ” or “HIGH EQ” filter with the **⏮** or **⏭** button, (7).
- ⇨ To select the frequency, press the **◀** or **▶** button, (7).
- ⇨ Adjust the level with the **⏮** or **⏭** key, (7).
- ⇨ In order to select the next filter, first press the **OK** button, (5), then the **⏮** or **⏭** button, (7).
- ⇨ When you have completed all the settings, press the **DEQ** button, (6).

## Adjusting the sharpness of the filter

- ⇨ Press the **DEQ** button, (6).
- ⇨ Select the adjustments for the sharpness of the individual filters “LO-Q-FAC”, “MI-Q-FAC” or “HI-Q-FAC” with the **⏮** or **⏭** button, (7).
- ⇨ To adjust the sharpness of the filter, press the **◀** or **▶** button, (7).
- ⇨ In order to select the next filter, first press the **OK** button, (5), then the **⏮** or **⏭** button, (7).
- ⇨ When you have completed all the settings, press the **DEQ** button, (6).

## Selecting the tone preset

You can choose preset tone settings for the following musical styles.

- ROCK
- DISCO
- JAZZ
- CLASSIC
- VOCAL

Settings for these styles have already been programmed.

- ⇨ Press the **DEQ** button, (6).
- ⇨ Select “PRESET” with the **⏮** or **⏭** button, (7).
- ⇨ To select the preset tone, press the **◀** or **▶** button, (7).
- ⇨ Press the **OK** button, (5).
- ⇨ When you have completed all the settings, press the **DEQ** button, (6).

## Adjusting the level indicator

The level indicator, or spectrometer, on your display temporarily provides a symbolic indication of the volume, the tone control settings and the equalizer settings while you make the adjustments.

When adjustments are not being made, the spectrometer can be used to display the car radio's output level.

## Switching the spectrometer on and off

- ⇨ Press the **MENU** button, (8).  
“MENU” appears in the display.
- ⇨ Press the **⏭** or **⏮** button, (7), as often as is necessary for “PEAK ON” or “PEAK OFF” to appear in the display.
- ⇨ Press the **◀** or **▶** buttons, (7), in order to switch the spectrometer on or off.
- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

## Equalizer adjustment guide

Tone impression/problem	Action
Bass too quiet	Bass boost with Filter: "LOW EQ" Frequency: 50 to 100 Hz Level :+4 to +6 dB
Bass sounds muddy Booming tone Unpleasant pressure	Reduce lower middle tones with Filters: "LOW EQ", "MID EQ" Frequency: 125 to 400 Hz Level : approx. -4 dB
Tone lacks depth, is aggressive, no stereo effect.	Reduce middle tones with Filters: "MID EQ", "HIGH EQ" Frequency: 1,000 to 2,500 Hz Level : -4 to -6 dB
Muffled tone Lack of clarity Instruments have no brightness	Boost treble tones with Filter: "HIGH EQ" Frequency: approx. 12,500 Hz Level : +2 to +4 dB

## External audio sources

**Instead of** the CD-changer, you can connect an external audio source with line output. Such sources might be a portable CD player, a MiniDisc player or an MP3 player.

The AUX input must be switched on in the menu.

You need an adapter cable to connect an external audio source. You can obtain such a cable from your Blaupunkt dealer.

## Switching the AUX input on and off

- ◇ Press the **MENU** button, (8).
- ◇ Press the **V** button, (7), as often as is necessary for "AUX OFF" or "AUX ON" to appear in the display.

If "AUX ON" is displayed, the input has already been switched on.

- ◇ Press the **<** or **>** buttons, (7), in order to switch AUX on or off.
- ◇ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

### Note:

If the AUX input is switched on it can be selected with the **CDC** button, (13).

## TMC for dynamic navigation systems

TMC means "Traffic Message Channel".

TMC is used to transmit traffic announcements digitally, and can therefore be used for route planning by suitable navigation systems. Your car radio has a TMC output that can be connected to Blaupunkt navigation systems. Your Blaupunkt dealer can tell you which navigation systems can be used with your car radio.

If a navigation system is connected and a TMC station is received, TMC will light up in the display.

**Pre-amplifier / subout**

You can use the connections provided on your car radio to connect an external pre-amplifier and a subwoofer.

We recommend that you use matching products from the Blaupunkt or Velocity ranges.

**Switch-on delay for external pre-amplifiers**

You can set a switch-on delay for connecting a pre-amplifier via the Pre-amp Out connection. The maximum delay is four seconds.

- ⇨ Press the **MENU** button, (8).
- ⇨ Press the **▼** or **▲** button, (7), as often as is necessary for “AMP DLAY” to appear in the display.
- ⇨ Press the **◀** or **▶** buttons, (7), in order to adjust the switch-on delay.

“DLAY OFF” means that there is no switch-on delay, while “DELAY 1” to “DELAY 4” indicate the delay time in seconds.

- ⇨ Press the **OK** button, (5) or the **MENU** button, (8), to leave the menu. The settings are then saved.

**Technical data**

**Amplifier**

Output power: 4 x 25 Watt sine wave according to DIN 45 324 at 14. 4 V  
4 x 45 Watt max. power

**Tuner**

Wavebands:  
VHF (FM) : 87.5 – 108 MHz  
MW : 531 – 1,602 kHz  
LW : 153 – 279 kHz

FM frequency response:  
30 - 15,000 Hz

**CD**

Frequency response:  
20 - 20,000 Hz

**Pre-amp Out**

4 channels: 4 V


**AUX input**

Sensitivity: 1,2 V / 10 kΩ

Subject to technical change!

**Service-Nummern / Service numbers / Numéros du service après-vente / Numeri del servizio di assistenza / Servicenummers / Telefonnummer für service / Números de servicio / Número de serviço**

	Tel.:	Fax:
Deutschland	0 18 05 00 02 25	0 51 21 49 40 02
Belgique / België	02.525. 54.44	02.525.54.48
France	014 010 70 07	014 010 73 20
Nederland	023 565 63 48	023 565 63 31
Great Britain	018 958 383 66	018 958 383 94
Ireland	(01) 4149400	(01) 4598830
Danmark	44 89 83 60	44 89 86 44
Sverige	08 750 15 00	08 750 18 10
Norge	66 81 70 00	66 81 71 57
Suomi	094 359 91	094 359 92 36
Österreich	01 610 39 0	01 610 39 391
Ελλάς	015 762 241	015 769 473
Česká republika	026 130 04 41	026 130 05 14
USA	800-266 25 28	708-681 71 88
Singapore	006 535 054 47	006 535 053 12
Slovensko	042 175 873 212	042 175 873 229

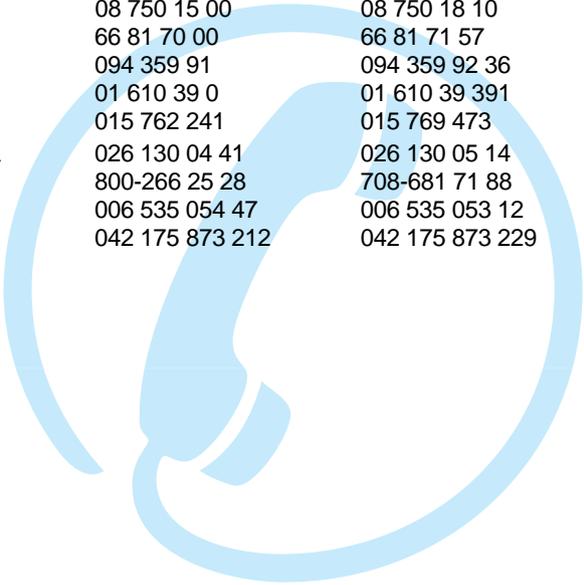

**Blaupunkt-Werke GmbH**  
**Bosch Gruppe**