


Adapterkabel 7 607 621 160 (Für Interface 7 607 586 511)

- (D) Bedienungsanleitung für das Fahrzeugspezifische Adapterkabel 7 607 621 160 an die Citroën Xsara / Evasion, Fiat Ulysse , Lancia Zeta und Peugeot 806-Lenkradfernbedienung.
- (GB) Operating instructions of the vehicle-specific adapter cable 7 607 621 160 to the Citroën Xsara / Evasion, Fiat Ulysse , Lancia Zeta und Peugeot 806 steering wheel remote control.
- (F) Mode d'emploi pour le câble d'adaptation spécifique au véhicule 7 607 621 160 à la télécommande au volant Citroën Xsara / Evasion, Fiat Ulysse , Lancia Zeta und Peugeot 806.
- (I) Istruzioni d'uso per il cavo di adattamento 7 607 621 160, con caratteristiche specifiche a seconda dell'autovettura, da allacciare al telecomando su volante.
- (NL) Gebruiksaanwijzing van de modelspecifieke adapterkabel 7 607 621 160 op de Citroën Xsara / Evasion, Fiat Ulysse , Lancia Zeta, Peugeot 806-stuurwielafstandsbediening.
- (S) Bruksanvisning för den fordonsspecifika adapterkabeln 7 607 621 160 till rattfjärrstyrningen Citroën Xsara / Evasion, Fiat Ulysse , Lancia Zeta, Peugeot 806.
- (E) Instrucciones de manejo del cable adapter 7 607 621 160 específico al vehículo al mando a distancia del volante.
- (P) Instrução de serviço para o cabo de adaptação específico para o tipo de automóvel 7 607 621 160 ao telecomando de volante da.

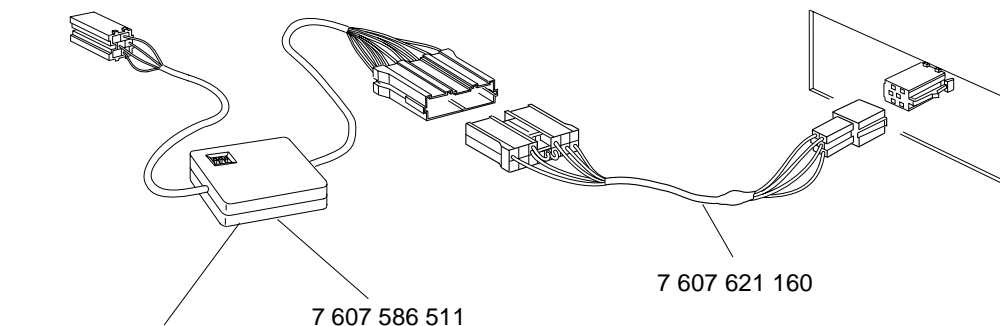

nicht im Lieferumfang enthalten
not included in the delivery
non fournis!
non in dotazione
niet meegeleverd
ikke idet da Leveringsomfang
ej med i leveransen
No incluido en el suministro!

Function List for Citroën Xsara / Evasion, Fiat Ulysse , Lancia Zeta und Peugeot 806 (01/00 →)

| | Radiotype: | 1 | 2 | 3 | 4 | 5 | Radiotype: | 1 | 2 | 3 | 4 | 5 | Radiotype: | 1 | 2 | 3 | 4 | 5 | Radiotype: | 1 | 2 | 3 | 4 | 5 | Radiotype: | 3 | |
|------------------|--------------------|---|---|---|---|---|-------------------|---|---|---|---|---|---------------|---|---|---|---|---|---------------|---|---|---|---|---|--------------|------------------|---|
| RC-Button | Tuner | | | | | | CC | | | | | | CD | | | | | | CDC | | | | | | Phone | | |
| Mode | SRC | x | x | x | x | x | SRC | x | x | x | x | | SRC | x | x | | x | x | SRC | | | x | x | x | x | | |
| Mode >2s | CD-Eject | x | x | | | | | | | | | | CD-Eject | x | x | | x | | | | | | | | | | |
| Mute | Mute | x | x | | x | x | Mute | x | x | | x | | Mute | x | x | | x | x | Mute | | | x | | x | x | | |
| Mute | Phone | | | x | | | Phone | | | x | | | Phone | | | | | | Phone | | | x | | | Phone | x | |
| Mute >2s | prog. Mute Volume | x | x | | | | prog. Mute Volume | x | x | | | | CD-Pause | x | x | | x | | CD-Pause | | | x | | | | | |
| Mute >2s | Telephone off | | | x | | | Telephone off | | | x | | | Telephone off | | | | | | Telephone off | | | x | | | | | |
| + | VOL + | x | x | x | x | x | VOL + | x | x | x | x | | VOL + | x | x | | x | x | VOL + | | | x | x | x | x | VOL + | x |
| - | VOL - | x | x | x | x | x | VOL - | x | x | x | x | | VOL - | x | x | | x | x | VOL - | | | x | x | x | x | VOL - | x |
| | Preset + | x | x | x | x | | FF | x | x | x | x | | Cue | x | x | | x | x | CD up | | | x | x | x | | | |
| | Manual Search up | | | | | x | | | | | | | | | | | | | Cue | | | | | | x | | |
| | Band Selection | x | x | x | x | | FR | x | x | x | x | | Review | x | x | | x | x | CD down | | | x | x | x | | | |
| | Manual Search down | | | | | x | | | | | | | | | | | | | Review | | | | | | x | | |
| >2s | Travelstore | x | x | x | x | | | | | | | | | | | | | | | | | | | | | | |
| Memo | Search next | x | x | x | x | | CPS FF | x | x | x | x | | Track up | x | x | | x | x | Track up | | | x | x | x | x | short code alpha | x |
| Memo | Band Selection | | | | | x | | | | | | | | | | | | | | | | | | | | | |
| Memo >2s | Search next | | | | | x | | | | | | | | | | | | | CD up | | | | | * | x | | |
| Memo | Search down | x | x | x | x | | CPS FR | x | x | x | x | | Track down | x | x | | x | x | Track down | | | x | x | x | x | | |
| Memo | Preset + | | | | | x | | | | | | | | | | | | | | | | | | | | | |
| Memo >2s | Scan | | | | | x | | | | | | | | | | | | | CD down | | | | | * | x | | |



Radiotype 1

Barcelona RCM 104 A, Hamburg RCM 104, Heidelberg RCM 126, Frankfurt RCM 104, Köln RCM 126, Las Vegas DJ, London RDM 104/RDM 126, Mailand DJ, Madison DJ, Madrid RCM 105, München RDM 126, Orlando DJ, Paris RCM 104, Stockholm RCM 104/RCM 126/RCM 128, San Francisco RDM 127, Sydney RCM 126/RCM 128, Toronto RDM 126/RDM 128, Washington RCM 127.

Radiotype 2

Arizona RCM 127, Avignon RCM 127, Bergamo RCR 148, Cannes RCM 127, Casablanca RCM 127, Coburg RCM 127, Como RCM 148, Düsseldorf RCM 127, Hamburg RCM 148, Los Angeles DJ, Madrid RCM 148, Melbourne RCM 148, Miami DJ, Modena RD 148, Montana RCR 148, New Orleans DJ, Paris RCM 127, Texas RCM 148, Viking TMC 148, Wiesbaden RCR 148, Woodstock DJ.

Radiotype 3

Amsterdam TCM 127
Helsinki RTM 127
Gemini GPS 148
Monte Carlo TCM 169

Radiotype 4

Generation Skyline
Generation FunLine
Generation T-Line

Radiotype 5

TravelPilot RNS 149
TravelPilot RNS 150

Hinweise:

* (D) Funktion ist geräteabhängig; (GB) Function depends on system; (F) La fonction dépend de l'appareil; (I) La funzione dipende dal tipo di apparecchio; (NL) De werking is afhankelijk van het soortapparaat; (S) Funktioner beror av utrustningen; (P) A função depende do aparelho; (E) Función depende del sistema.