

Adapterkabel 7 607 621 161 (für Interface 7 607 586 511)

- (D) Bedienungsanleitung für das fahrzeugspezifische Adapterkabel 7 607 621 161 an die Peugeot 206-Lenkradfernbedienung.**
- (GB) Operating instructions of the vehicle-specific adapter cable 7 607 621 161 to the Peugeot 206 steering wheel remote control.**
- (F) Mode d'emploi pour le câble d'adaptation spécifique au véhicule 7 607 621 161 à la télécommande au volant Peugeot 206.**
- (I) Istruzioni d'uso per il cavo di adattamento 7 607 621 161, con caratteristiche specifiche a seconda dell'autovettura, da allacciare al telecomando su volante.**
- (NL) Gebruiksaanwijzing van de modelspecifieke adapterkabel 7 607 621 161 op de Peugeot 206-stuurwielafstandsbediening.**
- (S) Bruksanvisning för den fordonsspecifika adapterkabeln 7 607 621 161 till rattfjärrstyrningen Peugeot 206.**
- (E) Instrucciones de manejo del cable adapter 7 607 621 161 específico al vehículo al mando a distancia del volante.**
- (P) Instrução de serviço para o cabo de adaptação específico para o tipo de automóvel 7 607 621 161 ao telecomando de volante da.**



Function List for Peugeot 206 (2000 →)

RC-Button	Radiotyp:	1	2	3	4	5	Radiotyp:	1	2	3	4	5	Radiotyp:	1	2	3	4	5	Radiotyp:	1	2	3	4	5	Radiotyp:	3	
	Tuner						CC						CD						CDC						Phone		
	VOL +	x	x	x	x	x	VOL +	x	x	x	x		VOL +	x	x		x	x	VOL +			x	x	x	x	VOL +	x
	VOL -	x	x	x	x	x	VOL -	x	x	x	x		VOL -	x	x		x	x	VOL -			x	x	x	x	VOL -	x
	Preset +	x	x	x	*								Track up				*		Track up					*			
	Manual Search up					x	FF	x	x		x		Cue	x	x		*	x	CD up			x	x	*			
																			Cue					*	x		
	Band Selection	x	x	x	*		FR	x	x		x		Track down				*		Track down					*			
	Preset +				*																						
	Manual Search Down					x							Review	x	x		*	x	CD down			x		*			
	T-Store	x	x	x	x														Review					x	x		



Radiotype 1

Barcelona RCM 104 A, Hamburg RCM 104, Heidelberg RCM 126, Frankfurt RCM 104, Köln RCM 126, Las Vegas DJ, London RDM 104/RDM 126, Mailand DJ, Madison DJ, Madrid RCM 105, München RDM 126, Orlando DJ, Paris RCM 104, Stockholm RCM 104/RCM 126/RCM 128, San Francisco RDM 127, Sydney RCM 126/RCM 128, Toronto RDM 126/RDM 128, Washington RCM 127.

Radiotype 2

Arizona RCM 127, Avignon RCM 127, Bergamo RCR 148, Cannes RCM 127, Casablanca RCM 127, Coburg RCM 127, Como RCM 148, Düsseldorf RCM 127, Hamburg RCM 148, Los Angeles DJ, Madrid RCM 148, Melbourne RCM 148, Miami DJ, Modena RD 148, Montana RCR 148, New Orleans DJ, Paris RCM 127, Texas RCM 148, Viking TMC 148, Wiesbaden RCR 148, Woodstock DJ.

Radiotype 3

Amsterdam TCM 127
Helsinki RTM 127
Gemini GPS 148
Monte Carlo TCM 169

Radiotype 4

Generation Skyline
Generation FunLine
Generation T-Line

Radiotype 5

TravelPilot RNS 149
TravelPilot RNS 150

Hinweise:

* (D) Funktion ist geräteabhängig; (GB) Function depends on system; (F) La fonction dépend de l'appareil; (I) La funzione dipende dal tipo di apparecchio; (NL) De werking is afhankelijk van het soort apparaat; (S) Funktionen beror av utrustningen; (P) A função depende do aparelho; (E) Función depende del sistema.