


Wireless Remote Controller (RC-S1)

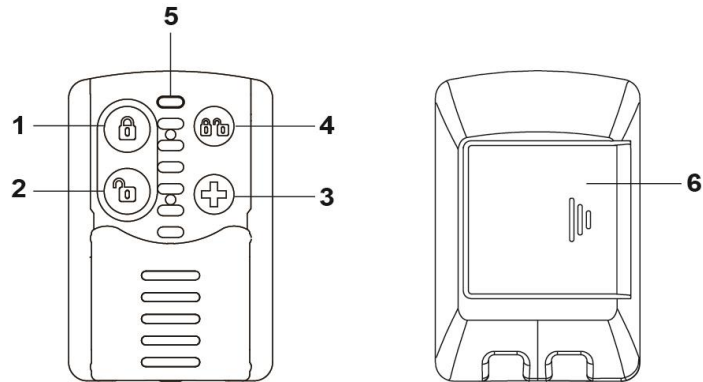

Parts Description

1. Arm Button

Press the button to arm the alarm system in Away Arm mode.

2. Disarm Button

Press the button to disarm the alarm system.

3. Emergency Button

Press and hold the button for 3 seconds to activate an Emergency alarm at any time.

4. Home Arm Button

Press the button to arm the alarm system in Home Arm mode.

5. LED Indicator

The LED Indicator will light up when any button is pressed.

6. Battery Cover

Package Content

- 1 x Remote Controller
- 1 x CR2032 3V lithium battery

Learning

Put the Control Panel into learning mode, then press the learn button to transmit learn code. Please refer to Control Panel manual for device programming instruction.

Operation

Disarming the System

The Remote Controller cannot disarm the Emergency Alarm triggered by itself.

Battery

The Remote Controller uses one CR2032 3V lithium battery as its power source. It also features low battery detection function to notify the Control Panel when battery voltage is low.

When the Remote Controller is on low battery, follow the procedure below to change the batteries.

1. Slide open the back cover
2. Remove the old battery
3. Insert the new batteries observing correct polarity.
4. Replace the back cover.

Specification

Environmental Condition

-10°C to 40°C, relative humidity 85% non-condensing.

Radio

868 MHz